



## Table of Contents

<b>Introduction</b>	<b>1</b>
<b>Description</b>	<b>1</b>
<b>Calibration</b>	<b>1</b>
<b>Installation</b>	<b>5</b>
<b>Operation</b>	<b>7</b>
<b>Maintenance</b>	<b>7</b>
<b>Troubleshooting</b>	<b>7</b>

**48<sup>HR.</sup>**  
**DELIVERY**



United States/Canada  
**TOLL FREE**  
**1-800-999-2900**

16650 Schoenborn Street  
Sepulveda, California 91343, U.S.A.  
Tel: (818) 894-7111 • Tlx: 65-1322  
FAX: (818) 891-3297  
CONNECT (MacNet): MIISEPULVEDA

United Kingdom  
**FREE PHONE**  
**0800 525107**

1 Lloyds Court, Manor Royal, Crawley  
W. Sussex RH10-2QU, United Kingdom  
Tel: 0293 514488 • Tlx: 87667  
FAX: 0293 536852

Australia  
**TOLL FREE**  
**008 251928**

3/18 Resolution Drive, Caringbah  
New South Wales 2229, Australia  
Tel: (02) 525-9177 • Tlx: 790-75914  
FAX: (02) 525-7296

Ask for the STAR Center

Moore Industries' STAR\* Center has a wide variety of quality instrumentation in stock and ready to ship.

- Signal Transmitters
- Temperature Transmitters
- P/I and I/P Converters
- Isolators and Converters
- Indicators and Displays
- Alarm Trips
- Integrators and Totalizers
- Power Transducers
- Instrument Power Supplies
- Racks, Rails and Enclosures

Most instruments can be customized to meet your needs. Even then, you'll never have to wait more than a few days.

**Moore Industries**

**STAR**  
**CENTER**

\* Support, Technical Assistance, and Repair (our Quick-Ship Facility)

## Introduction

Moore Industries' Signal Isolator/Converter (SIX) is a DIN-style, loop-powered device, used to provide complete isolation of instrumentation input and output. This helps eliminate faulty readings in measurement and control equipment caused by ground loops, electrical interference, or motor noise.

This manual provides a brief description of the SIX, a list of performance and functional specifications, a calibration procedure, operations notes, and troubleshooting information.

Notes and Cautions, where they appear in text or illustrations, are provided to assist the user in avoiding operational inconveniences (Notes), or practices that otherwise might result in damage to the unit (Cautions).

## Description

The SIX is loop-powered. When connected in a 12-42 Vdc loop, it converts a standard process current or voltage signal to a proportional, isolated 4-20 or 10-50 mA output; breaking the galvanic path between a transmitted signal source and its receiving device.

The unit is packaged in a compact, DIN-style housing that snaps easily on to G-rail mounting hardware (DIN EN50035). This makes it ideal for use in high density installations.

## Controls

The SIX has Zero and Span potentiometers located on the front panel of the unit. On older units these were labeled:

→0← for Zero, and

|←→| for Span.

On newer the words "ZERO" and "SPAN" may be used to identify the potentiometers.

Table 1 consists of the SIX performance and functional specifications.

## Options

Units may be ordered with RFI-filtered terminals and case assembly (RF Option). RF-equipped units provide RFI/EMI protection up to 50V/M - abc =  $\pm 0.1\%$  F.S., as defined by SAMA standard 33.1.

Contact your Sales Representative or Moore Industries for more information on available SIX options and compatible devices.

**Serial Number.** A complete history of every unit sold and serviced by Moore Industries is kept at the factory. This data is keyed to each unit's serial number. If service data is required on an SIX, providing the factory with the unit serial number will allow our highly skilled technicians to better assist you.

The SIX serial number is located on a label affixed to the side panel of the unit.

**Model Number.** Moore Industries' model numbers identify the type of instrument, functional characteristics, operating parameters, any options ordered, and housing type. If all accompanying documentation for a unit is missing, the model number may be used to obtain technical information.

The model number for the SIX is located on the same label as its serial number.

The example following Table 1 is provided to assist in deciphering the fields of the SIX model number.

## Calibration

Prior to unit shipment, each SIX is calibrated and tested according to Moore Industries' strict quality control guidelines. It is recommended, however, that a bench check of potentiometer settings and output levels be performed before placing the SIX into service.

**Table 1. SIX Specifications**

Characteristics	Specifications
<b>Input</b>	<b>Factory-set.</b> Available ranges are: 0 to 20 mA 4 to 20 mA -1 to +1 mA 0 to 10 V 1 to 5 V 0 to 1 V
<b>Output</b>	<b>Factory-set.</b> 4 to 20, or 10 to 50 mA.
<b>Power</b>	2-wire loop-power; 12 to 42 Vdc.
<b>Performance</b>	<b>Isolation:</b> Input and output are transformer-isolated with no galvanic path (dc connection) up to 500 Vrms. <b>Frequency Response:</b> 10 Hz at the 3 dB point. <b>Maximum Input Over-range:</b> $\pm 60$ V <b>Input Impedance:</b> 1.0 Mohm for voltage inputs; 50ohms for 4-20 mA input; 1 kohm for -1 to +1 mA input. <b>Load Capability:</b> 4-20 mA into 1500ohms; limited to 50 mA, maximum. <b>Power Supply Effect:</b> Less than 0.05% of span over the full power supply range.
<b>Adjustability</b>	<b>Calibration Accuracy:</b> $\pm 0.1\%$ of span. Zero potentiometer adjusts unit zero to within $\pm 5\%$ of span. Span potentiometer allows for 100% adjustment, $\pm 10\%$ , with full-scale input.
<b>Environmental Ratings</b>	<b>RFI/EMI Effect:</b> Without RF Option, effect is negligible @ 25 V/m at typical communications frequencies. With RF, protection of 50 V/m-abc = $\pm 0.1\%$ F.S., as defined by SAMA Standard 33.1. <b>Ambient Operating Temperature Range:</b> $-30$ to $+82$ °C ( $-22$ to $+180$ °F). <b>Temperature Change Effect on Unit Operation:</b> 0.015% of span per °C change over a 0 to 70 °C range.
<b>Weight</b>	Approximately 215 grams (7.6 ounces).
<b>NOTE:</b> Refer to Installation Section of this manual for unit dimensions.	


## Calibration Equipment

Table 2 lists the calibration equipment required for this bench check procedure. This equipment is not supplied with the unit.

## Calibration Setup


Figure 1 shows the calibration setup for the SIX. To check or calibrate the SIX, connect the unit as shown in the illustration, and apply the power according specification (refer to the specifications table and the model number of your unit).

## EXAMPLE

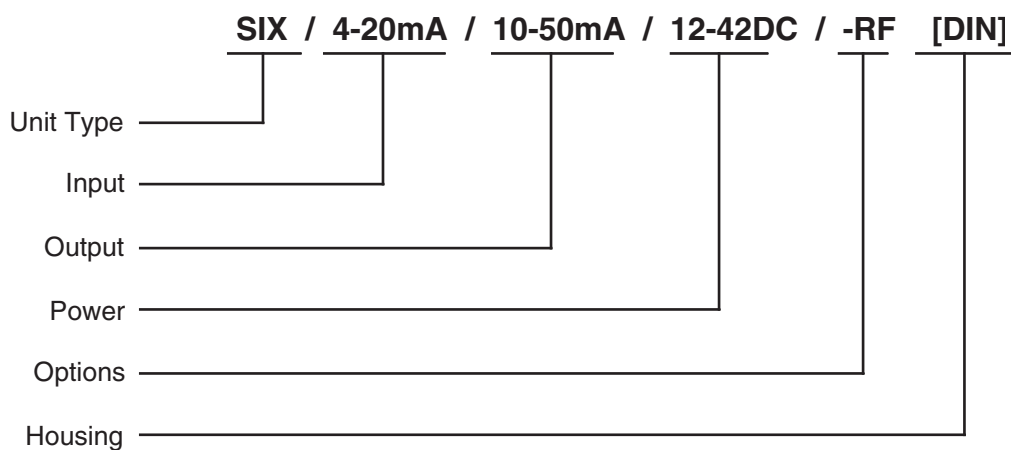

**Table 2.** SIX Calibration Equipment

Equipment	Characteristics
<b>Signal Source</b>	Appropriate for the intended SIX application, accurate to within $\pm 0.05\%$ of span, minimum
<b>DC milliammeter</b> or <b>DC voltmeter with Precision resistor</b>	Fluke model 8899, or equivalent unit accurate to within $\pm 0.05\%$ of span, minimum.  Voltmeter accurate to within $\pm 0.05\%$ of span, minimum. Resistor: 250ohm ( $\pm 0.1\%$ ), rated for 4-20 mA.
<b>Power Supply</b>	Capable of 12 to 42 Vdc.
<b>Screwdriver</b>	Slotted head, width 2.54 mm (0.1 inch).

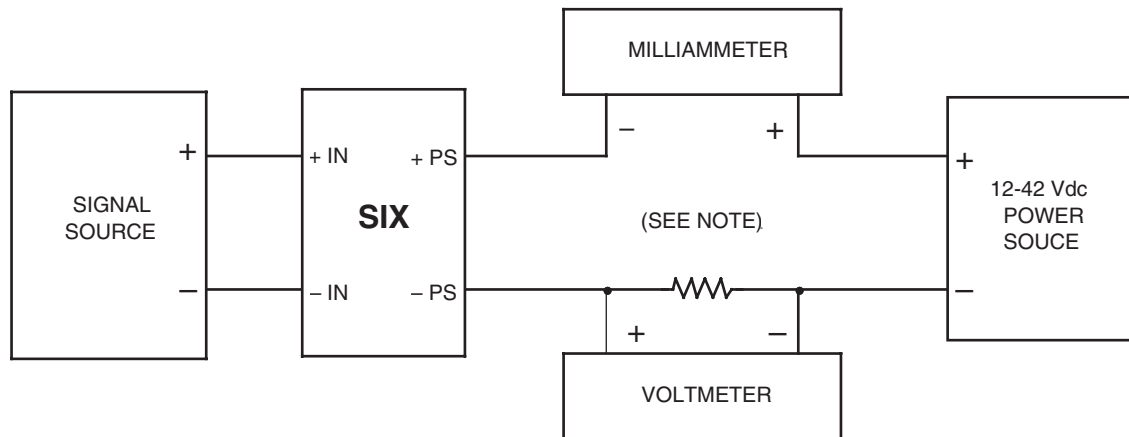

**NOTE:** Either milliammeter or voltmeter may be used for monitoring output.

**Figure 1.** *SIX Calibration Setup*

Note that there are no internal adjustments or settings to effect on the SIX. Disassembly of any kind is not recommended.

After applying power, allow approximately five minutes for stabilization/warm-up.

## Calibration Procedures

There are two options for monitoring the output of the SIX shown in the figures; either a dc milliammeter or a dc voltmeter with load resistor may be used to monitor and set output levels.

1. With the calibration setup complete, adjust both potentiometers 15 turns counterclockwise, then 7.5 turns clockwise (mid-scale).
2. Simulate zero percent input.

3. Adjust zero potentiometer until milliammeter reads 4 mA for 4-20 mA units, 10 mA for 10-50 mA units, or until voltmeter reads 1 volt.

### **CAUTION**

*To avoid damaging the housings, use a screwdriver with a head not wider than 2.54 mm (0.1 inch) to adjust the zero and span potentiometers.*

4. Set input to 100 percent.
5. Adjust span potentiometer until milliammeter reads 20 mA for 4-20 mA units, 50 mA for 10-50 mA units, or until voltmeter reads 5 volts.
6. Repeat steps 2 through 5 until zero and 100 percent readings are stable,  $\pm 0.1\%$ .

## Installation

In this manual, the installation of the SIX is divided into two phases: physically mounting the unit, and making the electrical connections. It is recommended that the unit(s) be mounted before making any connections.

## Mounting

When mounting the SIX, make every effort to install it in an area that is relatively free of dust, moisture, and corrosive materials.


To mount the unit on a DIN-style G-rail, insert the metal clip on the unit's back panel under the top lip of the rail. Pivoting on the clip, press down firmly until the SIX snaps into place.

If it becomes necessary to remove the unit, grasp the bottom of its front panel and lift upward.

### **NOTE**

*The SIX has no case ground connection. If possible, avoid mounting the unit in any electrical field. Secure the case to a good conductor at zero potential.*

Figure 2 shows the mounting dimensions for the SIX.

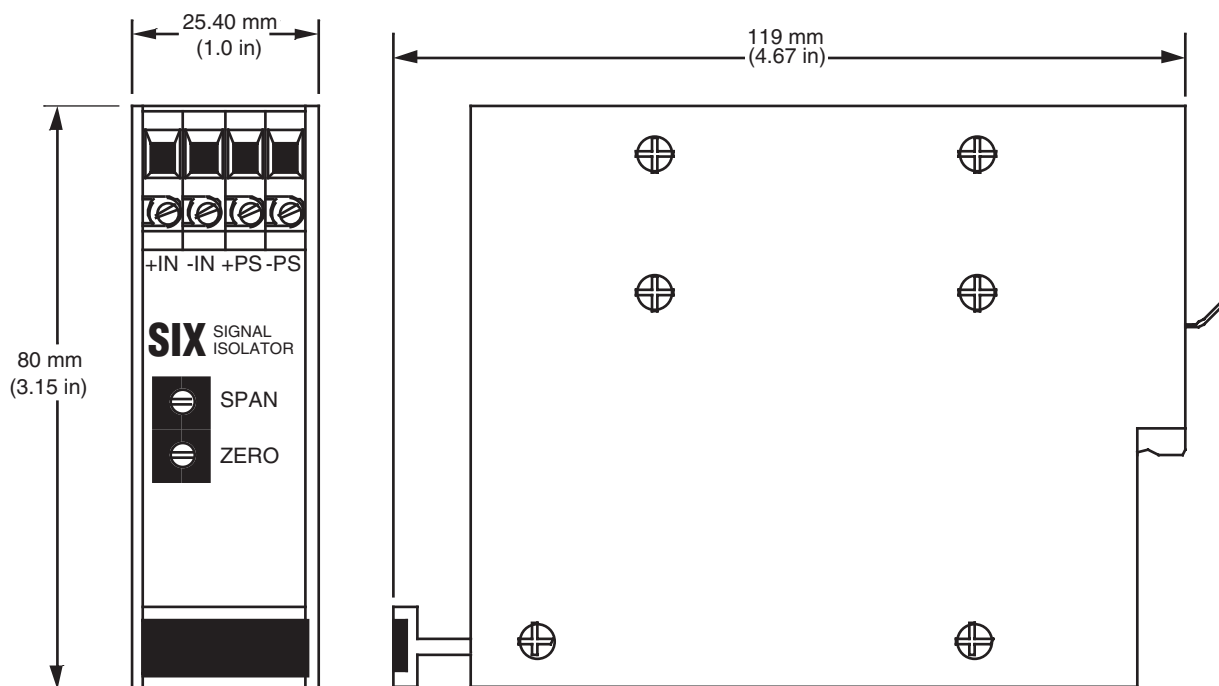

**Figure 2.** SIX Outline Dimensions

# SIX

## Electrical Connections


The SIX has four terminals on its front panel. They are labeled “+IN” and “–IN” for connection of the signal input, and “+PS” and “–PS” for connection of the unit’s output.

Figure 3 illustrates the connection of the SIX in a generic application.

Figure 4 shows the unit connected in another typical operational scenario.


To complete these connections, use a small, slotted screwdriver to loosen the SIX terminal screws, and slip the appropriate stripped wire end into the terminal hole. Tighten the terminal screw.

Both the input and output may be grounded. The SIX input and output are transformer-isolated with no dc connection between them. This isolation provides 67 dB common mode rejection, and allows the input to float with respect to the output.

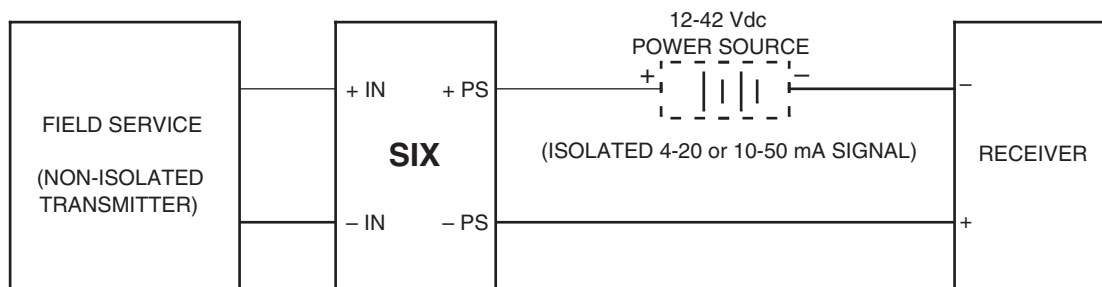

**Figure 3.** *SIX Typical Installation Hookup*



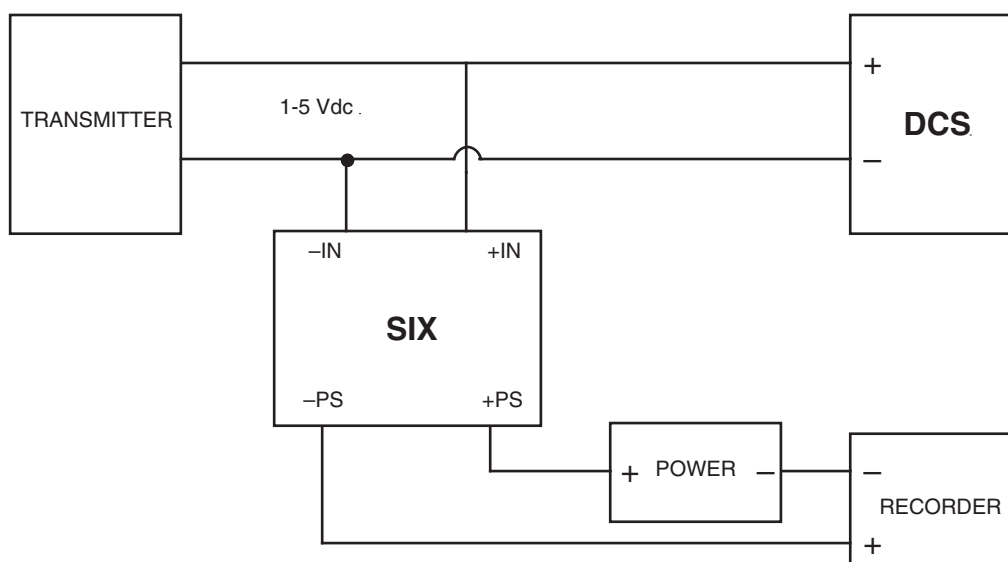

**Figure 4.** *SIX Installed as a Repeater/Diverter*

## Operation

Once mounted and connected according to the instructions, the SIX operates unattended. After the initial calibration of the Zero and Span potentiometers, no further adjustment is required.

## Maintenance

A check of terminal connections is recommended every six months. Ensure that all terminal screws are tight and free of corrosion. Check that adequate ventilation exists, or that heat sinking materials are used in mounting.

## Troubleshooting

If the SIX is found to be performing below specification, complete the following checklist:

1. Make sure all connections are clean and tight.
2. Verify the accuracy and calibration of bench instruments used to take measurements.
3. Ensure that signal and power levels in the instrumentation loop have not changed since the unit was installed. Make sure that power is within specified limits (refer to table 1).

If problems persist, note the serial and model numbers of the offending unit, and contact Moore Industries' Customer Service Department. Instructions for return of Moore Industries equipment are on the back cover of this manual.



# Declaration of Conformity

EMC Directive 89/336/EEC



**Manufacturer's Name:** Moore Industries-International, Inc.  
**Manufacturer's Address:** 16650 Schoenborn Street  
North Hills, CA 91343-6196  
USA

**Declares that the product(s):**

**Product Name:** SIX

**MODEL / INPUT / OUTPUT / POWER / OPTIONS / HOUSING**

**Model Number(s):** SIX \* \* 12-42VDC \* \*

\*Indicates any input, output and housing as stated on the product data sheet.

**Conforms to the following EMC specifications:**

EN50081-2, 1993, Generic Emissions Standard, Industrial Environment.

EN50082-2, 1995, Generic Immunity Standard, Industrial Environment.

**Supplemental Information:**

None.

January 22, 1999

Date

**Fred Adt**

Quality Assurance Director

**Robert Stockham**

Moore Industries-International, Inc.

*European Contact: Your Local Moore Industries Sales and Service Office*

**The Interface Solution Experts • [www.miinet.com](http://www.miinet.com)**



United States • [info@miinet.com](mailto:info@miinet.com)  
Tel: (818) 894-7111 • FAX: (818) 891-2816  
Australia • [sales@mooreind.com.au](mailto:sales@mooreind.com.au)  
Tel: (02) 8536-7200 • FAX: (02) 9525-7296

Belgium • [info@mooreind.be](mailto:info@mooreind.be)  
Tel: 03/448.10.18 • FAX: 03/440.17.97  
The Netherlands • [sales@mooreind.nl](mailto:sales@mooreind.nl)  
Tel: (0)344-617971 • FAX: (0)344-615920

China • [sales@mooreind.sh.cn](mailto:sales@mooreind.sh.cn)  
Tel: 86-21-62481120 • FAX: 86-21-62490635  
United Kingdom • [sales@mooreind.com](mailto:sales@mooreind.com)  
Tel: 01293 514488 • FAX: 01293 536852

## RETURN PROCEDURES

### To return equipment to Moore Industries for repair, follow these four steps:

1. Call Moore Industries and request a Returned Material Authorization (RMA) number.

#### Warranty Repair –

If you are unsure if your unit is still under warranty, we can use the unit's serial number to verify the warranty status for you over the phone. Be sure to include the RMA number on all documentation.

#### Non-Warranty Repair –

If your unit is out of warranty, be prepared to give us a Purchase Order number when you call. In most cases, we will be able to quote you the repair costs at that time. The repair price you are quoted will be a "Not To Exceed" price, which means that the actual repair costs may be less than the quote. Be sure to include the RMA number on all documentation.

2. Provide us with the following documentation:
  - a) A note listing the symptoms that indicate the unit needs repair
  - b) Complete shipping information for return of the equipment after repair
  - c) The name and phone number of the person to contact if questions arise at the factory
3. Use sufficient packing material and carefully pack the equipment in a sturdy shipping container.
4. Ship the equipment to the Moore Industries location nearest you.

The returned equipment will be inspected and tested at the factory. A Moore Industries representative will contact the person designated on your documentation if more information is needed. The repaired equipment, or its replacement, will be returned to you in accordance with the shipping instructions furnished in your documentation.

#### WARRANTY DISCLAIMER

THE COMPANY MAKES NO EXPRESS, IMPLIED OR STATUTORY WARRANTIES (INCLUDING ANY WARRANTY OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE) WITH RESPECT TO ANY GOODS OR SERVICES SOLD BY THE COMPANY. THE COMPANY DISCLAIMS ALL WARRANTIES ARISING FROM ANY COURSE OF DEALING OR TRADE USAGE, AND ANY BUYER OF GOODS OR SERVICES FROM THE COMPANY ACKNOWLEDGES THAT THERE ARE NO WARRANTIES IMPLIED BY CUSTOM OR USAGE IN THE TRADE OF THE BUYER AND OF THE COMPANY, AND THAT ANY PRIOR DEALINGS OF THE BUYER WITH THE COMPANY DO NOT IMPLY THAT THE COMPANY WARRANTS THE GOODS OR SERVICES IN ANY WAY.

ANY BUYER OF GOODS OR SERVICES FROM THE COMPANY AGREES WITH THE COMPANY THAT THE SOLE AND EXCLUSIVE REMEDIES FOR BREACH OF ANY WARRANTY CONCERNING THE GOODS OR SERVICES SHALL BE FOR THE COMPANY, AT ITS OPTION, TO REPAIR OR REPLACE THE GOODS OR SERVICES OR REFUND THE PURCHASE PRICE. THE COMPANY SHALL IN NO EVENT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES EVEN IF THE COMPANY FAILS IN ANY ATTEMPT TO REMEDY DEFECTS IN THE GOODS OR SERVICES, BUT IN SUCH CASE THE BUYER SHALL BE ENTITLED TO NO MORE THAN A REFUND OF ALL MONIES PAID TO THE COMPANY BY THE BUYER FOR PURCHASE OF THE GOODS OR SERVICES.

ANY CAUSE OF ACTION FOR BREACH OF ANY WARRANTY BY THE COMPANY SHALL BE BARRED UNLESS THE COMPANY RECEIVES FROM THE BUYER A WRITTEN NOTICE OF THE ALLEGED DEFECT OR BREACH WITHIN TEN DAYS FROM THE EARLIEST DATE ON WHICH THE BUYER COULD REASONABLY HAVE DISCOVERED THE ALLEGED DEFECT OR BREACH, AND NO ACTION FOR THE BREACH OF ANY WARRANTY SHALL BE COMMENCED BY THE BUYER ANY LATER THAN TWELVE MONTHS FROM THE EARLIEST DATE ON WHICH THE BUYER COULD REASONABLY HAVE DISCOVERED THE ALLEGED DEFECT OR BREACH.

#### RETURN POLICY

For a period of thirty-six (36) months from the date of shipment, and under normal conditions of use and service, Moore Industries ("The Company") will at its option replace, repair or refund the purchase price for any of its manufactured products found, upon return to the Company (transportation charges prepaid and otherwise in accordance with the return procedures established by The Company), to be defective in material or workmanship. This policy extends to the original Buyer only and not to Buyer's customers or the users of Buyer's products, unless Buyer is an engineering contractor in which case the policy shall extend to Buyer's immediate customer only. This policy shall not apply if the product has been subject to alteration, misuse, accident, neglect or improper application, installation, or operation. THE COMPANY SHALL IN NO EVENT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.



United States • [info@miinet.com](mailto:info@miinet.com)

Tel: (818) 894-7111 • FAX: (818) 891-2816

Australia • [sales@mooreind.com.au](mailto:sales@mooreind.com.au)  
Tel: (02) 8536-7200 • FAX: (02) 9525-7296

Belgium • [info@mooreind.be](mailto:info@mooreind.be)  
Tel: 03/448.10.18 • FAX: 03/440.17.97

The Netherlands • [sales@mooreind.nl](mailto:sales@mooreind.nl)  
Tel: (0)344-617971 • FAX: (0)344-615920

China • [sales@mooreind.sh.cn](mailto:sales@mooreind.sh.cn)  
Tel: 86-21-62491499 • FAX: 86-21-62490635

United Kingdom • [sales@mooreind.com](mailto:sales@mooreind.com)  
Tel: 01293 514488 • FAX: 01293 536852